



# Golden Eye

Archive Scanner with Universal Optics


## Licensing instructions for GE4 2018 software

With the new 2018 Golden Eye software release there will be the need for a user to apply for and install a new licence. This document explains how to do this.


1. First the downloaded `install_goldeneye-2018.1.xxx.exe` file needs to be run. This will launch the installer and carry out the installation of the software to the PC.
2. After installation a Golden Eye 2018 icon will appear on the desktop.



3. Click on this to open the Golden Eye software.
4. Next the licence control window will open as below

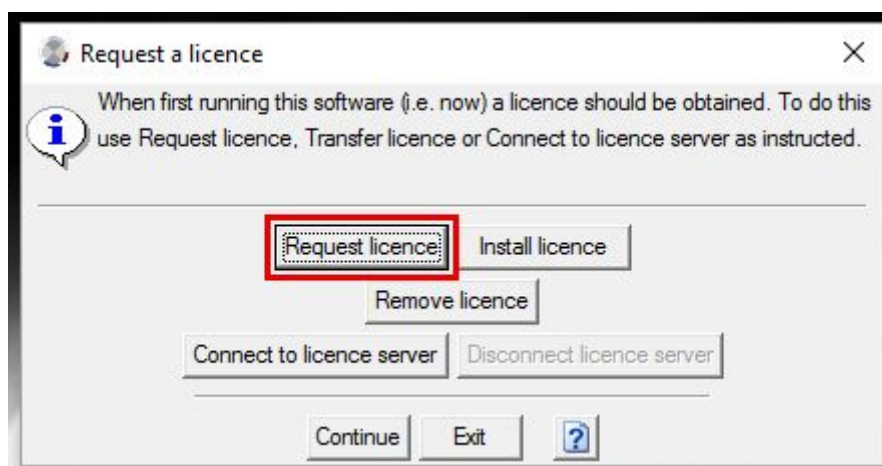

5. Press the **Request licence** button. This will launch a new window.

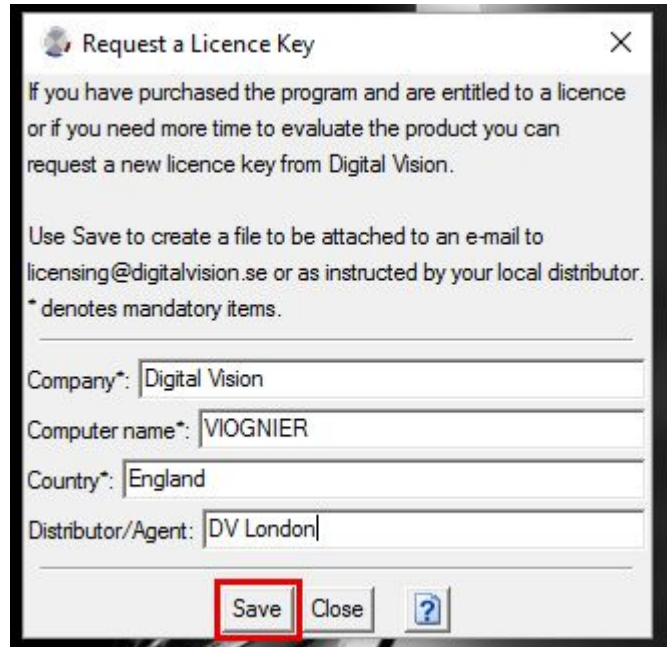


6. Fill in the details and the press the Save button. This will prompt you to save a file called **request.txt** on the PC. **DO NOT open the Request.txt file with a text editor.**

7. Email the **request.txt** file as an attachment in an e-mail to [licensing@digitalvision.se](mailto:licensing@digitalvision.se)


8. The receipt of a new licence from Digital Vision may take some hours due to global time differences so it is best to plan to do this the day before fully using the new software.

9. You will get an e-mail back from Digital Vision. It will include an attachment called **licence.txt**. Save this file to the Golden Eye PC. **DO NOT open the License.txt file with a text editor.**

10. Now run the software again - once again the licence control window will open as below.

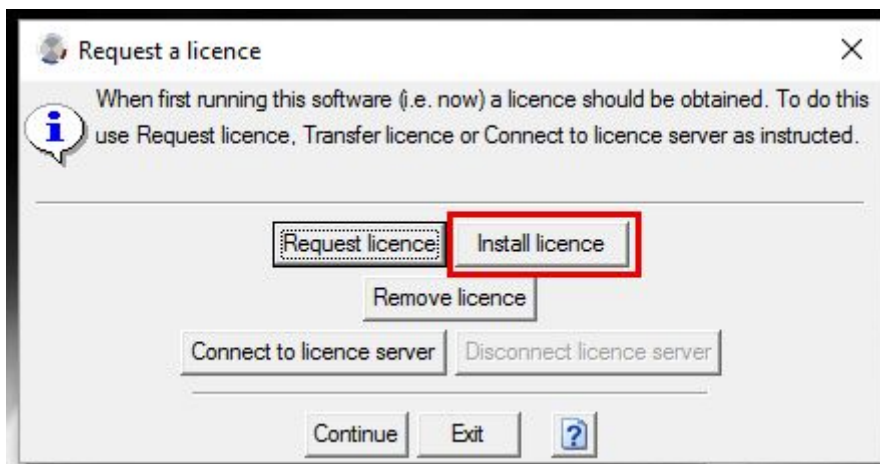

11. Click on the **Install Licence** button. This will launch a new window.

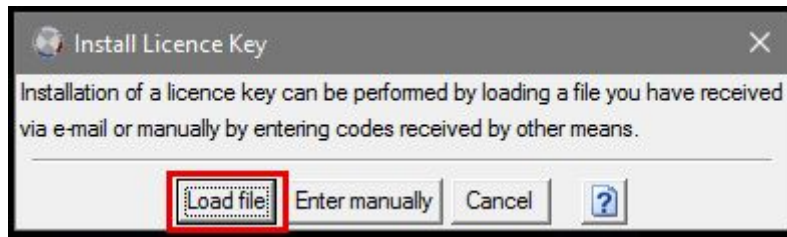


12. Press **Load File**. Now select the **licence.txt** file that you saved earlier.

13. At this point a pop up window will appear confirming successful installation.



14. Or a new pop up window may appear if the configuration was changed for any reason.

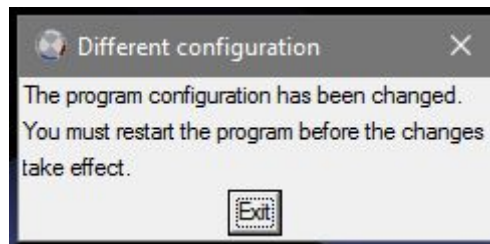

15. Press **Exit** and then re-run the Golden Eye 2018 icon from the desktop.



16. The program should now run successfully.

17. Note: If you need to access the licence dialogs again this can be done from the **Statistics** pane in the software.

Colour Management | Sound and Keycode | Recording | File Viewer | Preferences | Advanced Settings | **Statistics**

---

**Film**

Film Thickness -- mm

Film Length L 276.1 m 906 feet

Film Length R 22.1 m 73 feet

Film Length 300.0 m 984 feet

Film Shrinkage 0.5 %

---

**Roll Sizes**

Threading Normal

Left Core Radius 25 mm

Righ Core Radius 25 mm

Left Roll Radius 164 mm

Righ Roll Radius 52 mm

---

**Film Transport**

Sync Exposure Idle

Play Speed Idle

Left Roll Speed 0 mm/s

Right Roll Speed 0 mm/s

Capstan Speed 0 mm/s

Sprocket Speed 0 mm/s

---

**Temperature**

Main Camera Temperature 37 °C OK

Sync Camera Temperature 0 °C Unknown

Main Board Temperature 0 °C Unknown

Film Gate Temperature 0 °C Unknown

**Scanner Info**

Image size: (2048, 1494)

Current Zoom 1

Gecko version: Simulator

Bootstrap version:

FPGA version:

Scanner S/N:

Golden Eye Version 2016.1-007

---

**License**

User: Nucoda

Company:

Licence expires: 2017-03-30

Configuration Code: h949 kTWY 42Xe WrRt JEPz PZcW Ep

Valid up to version: 2016.1

License type: Normal License

License server: None