



# Golden Eye

Archive Scanner with Universal Optics


## Upgrade instructions for Gecko 199 software

This document explains how to add a new Gecko version, and how to add the new Film Definitions file.

There should be five files that have been downloaded from the FTP

- gebootstrap.exe
- gecko.exe
- gecko\_driver.dll
- filmdefinitions.txt
- wheeldata.txt


1. Copy all files into the Scanner folder on the local disk (C: drive).

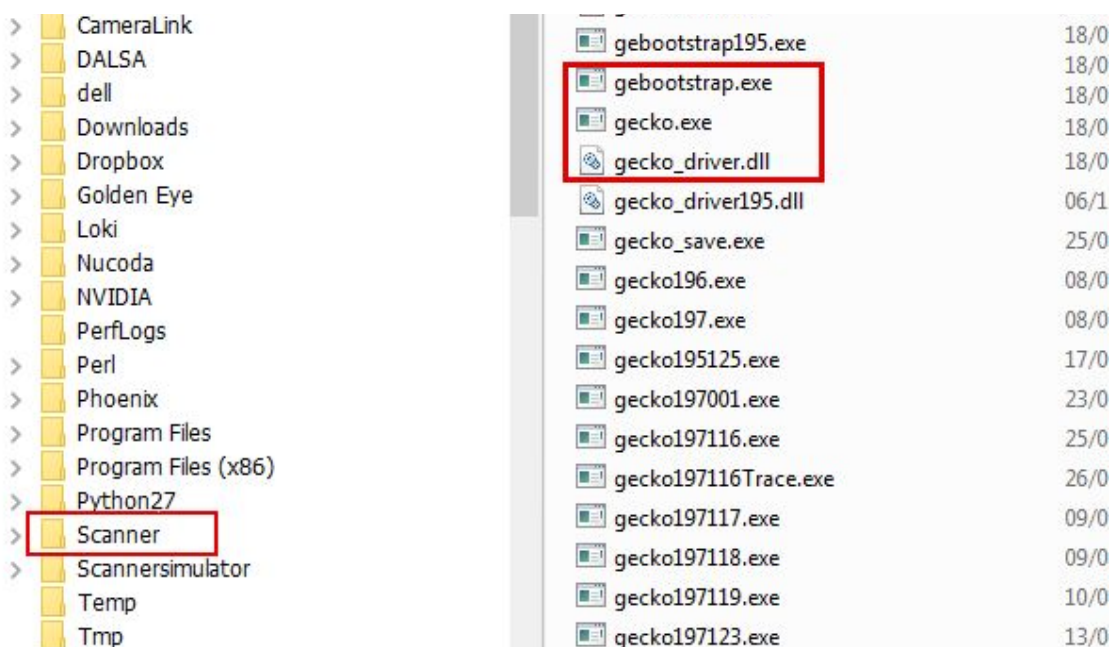


2. Open Golden Eye software
3. Select Advanced Setting/Factory Calibration tab, if the Factory Calibration is greyed out then select Advanced User (see fig.3) at the bottom of the page. By selecting the button, a separate window will open up, add a tick to the **Enable Advanced Menu** option




4. Press the button **Edit Film Wheel Variants** (see image highlighted in red), this will open a new window.

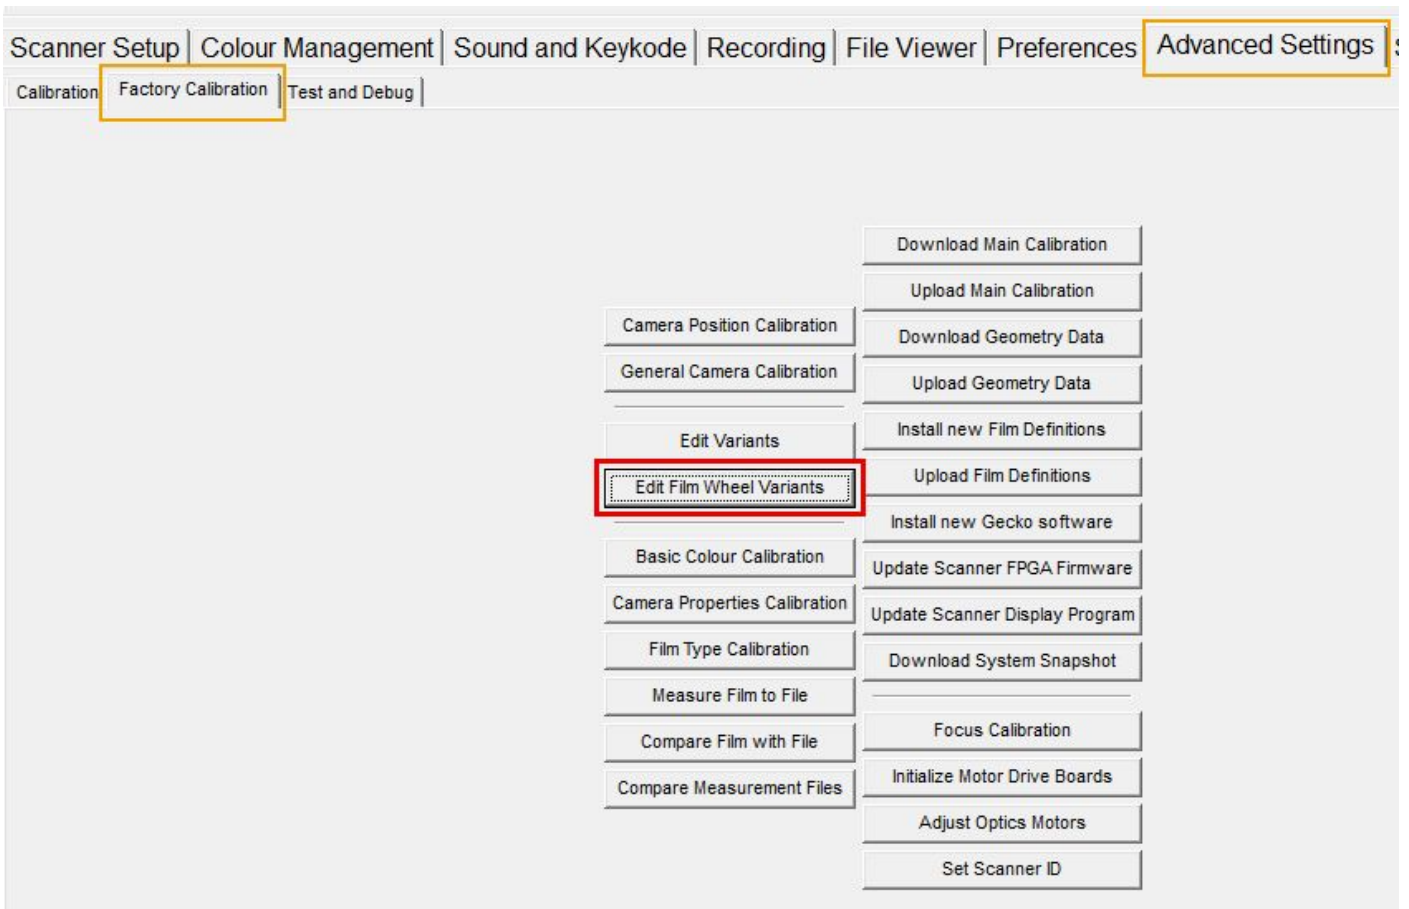

5. In the "Name" list, select "std\_8\_16\_35\_70\_ns"

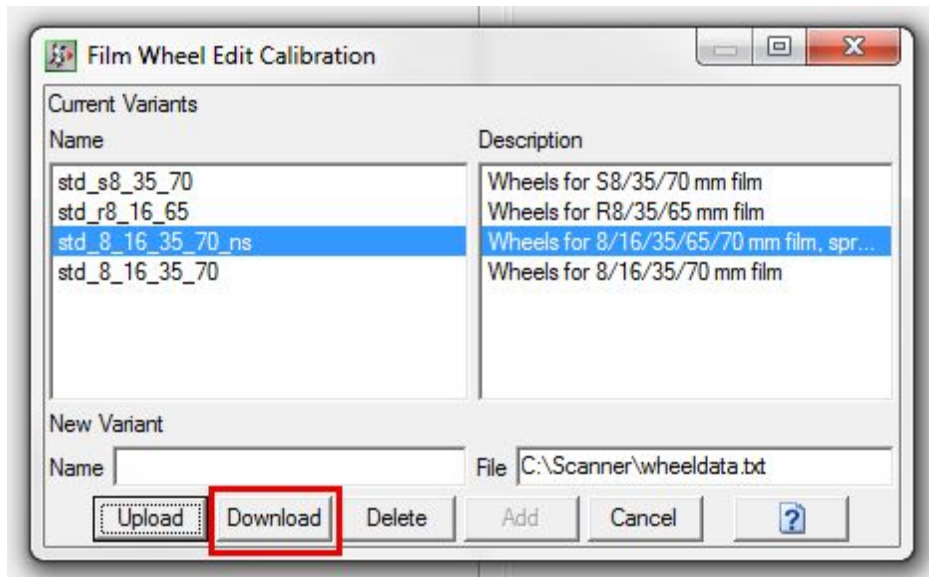


6. Click "Download".
7. Wait for the download to finish.
8. Sometimes the download does not appear to finish and an error message will appear as follows.

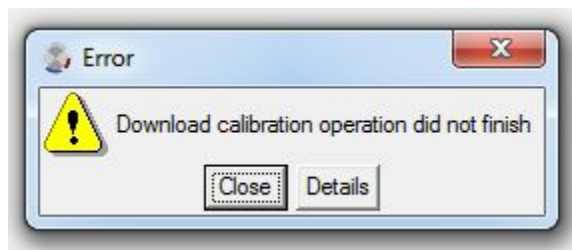


9. If this happens press **Close** and continue.
10. Next press the button **Install new Film Definitions** (see image highlighted in red), this will add the `filmdefinitions.txt` file to the scanner.

## Upgrade instructions for Gecko 199 software

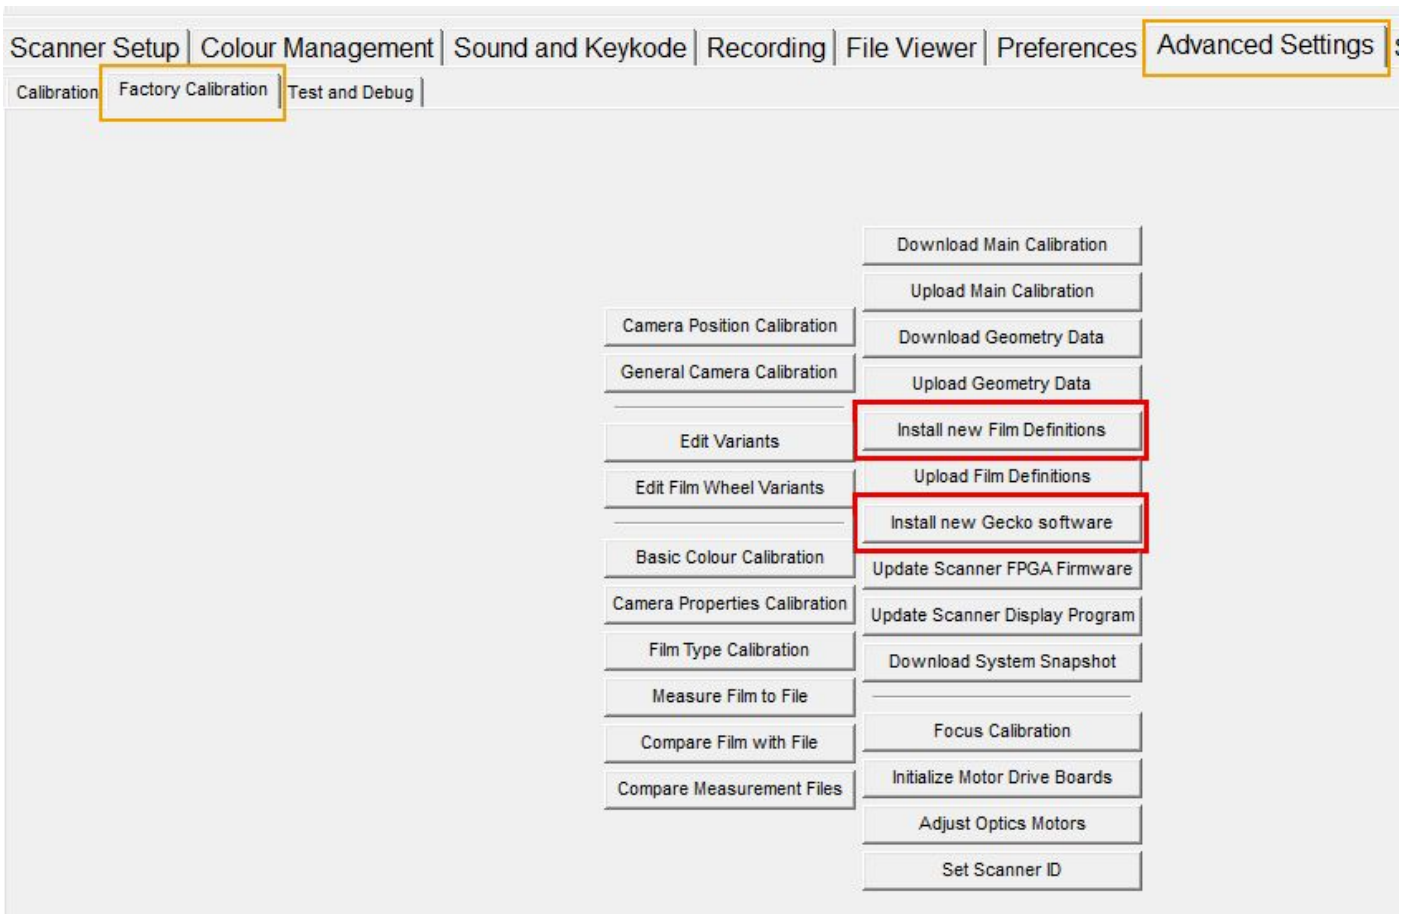

11. Finally update the Gecko by pressing **Install new Gecko software**.

12. Before restarting the scanner and closing down the Golden Eye software check in the **Statistics** tab that Gecko has been updated with the desired version. It should say **GECKO program ver 199**

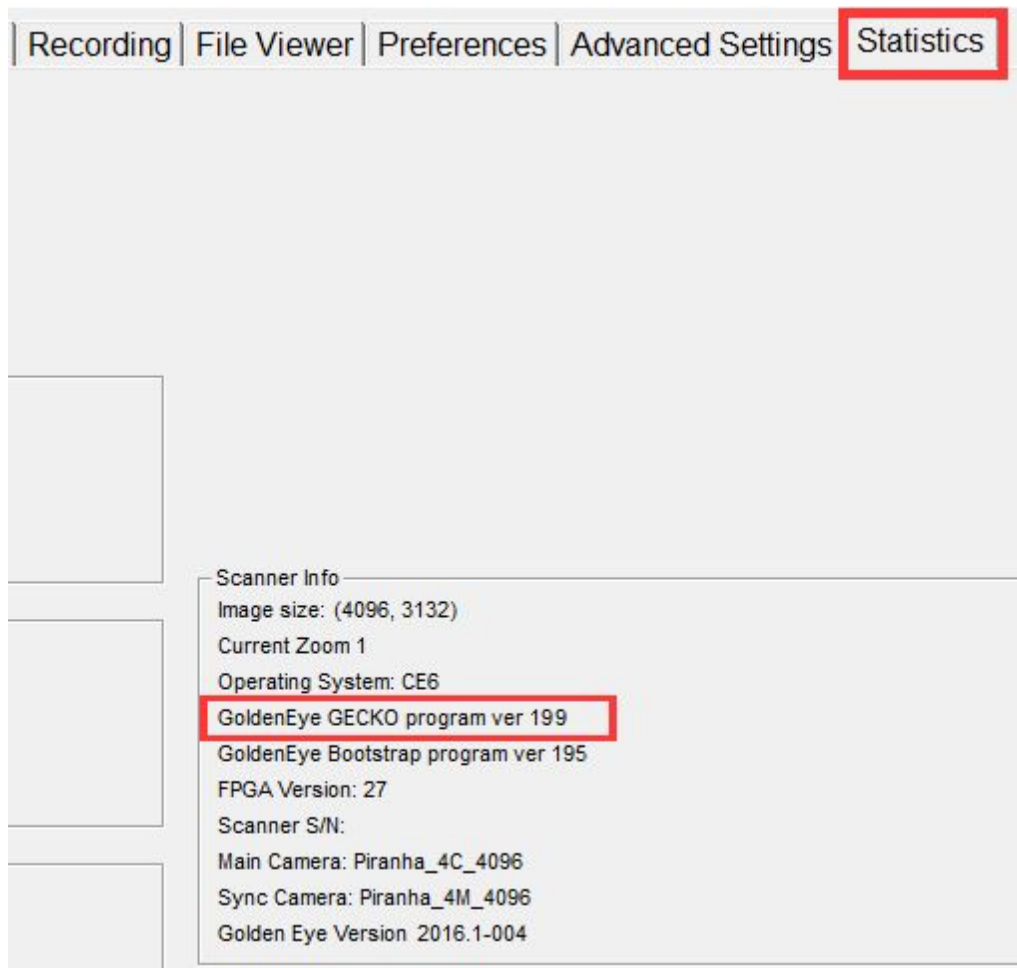

13. Close down Golden Eye software

14. Restart Scanner and Computer.